


The 8200 faceplate module requires only a single tool to assemble or disassemble. Please follow the steps below to assure proper mechanical performance and reliability.


Assembly

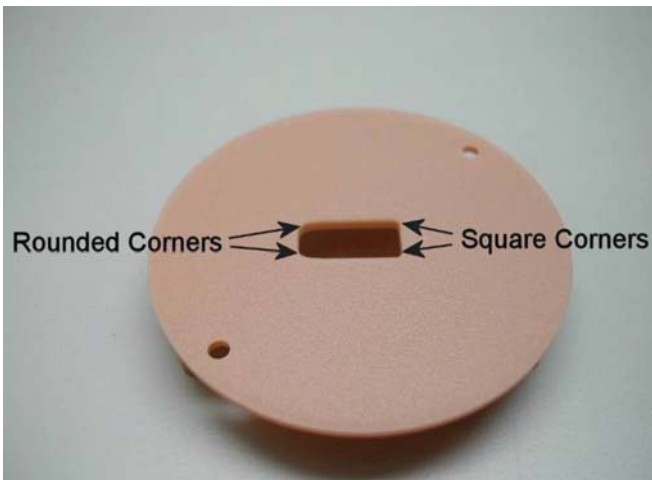


Insert module flush on rounded corners first
Snap module down on square corners second



Place module against faceplate as shown
Note: Pushbutton end is inserted first

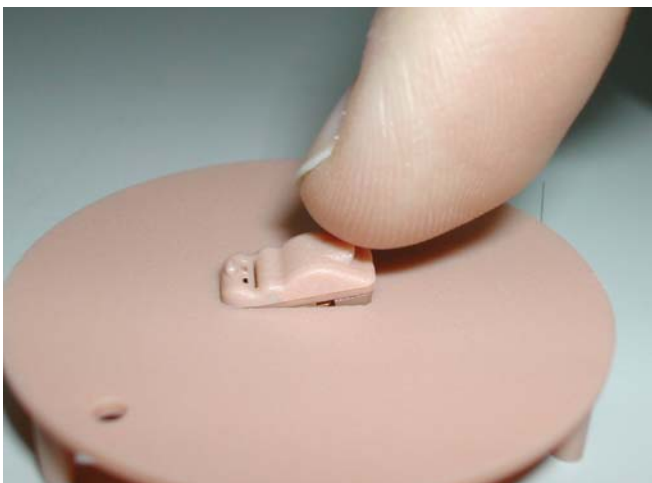

Push down on module until you hear a "click"


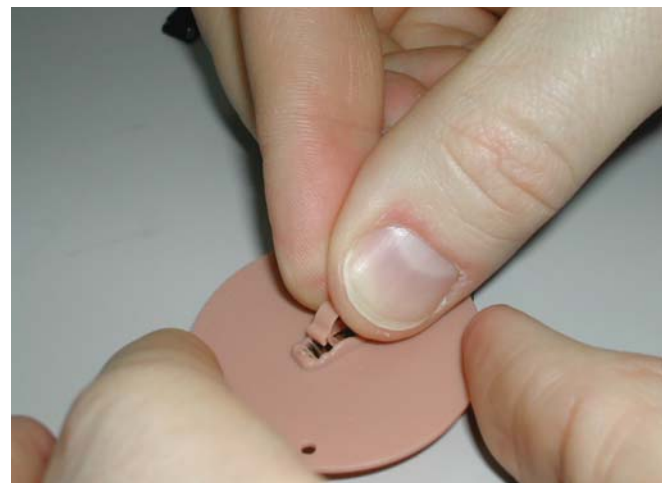


Insert battery door on module hinge pin by hand


8200

Series Faceplate Module


Disassembly

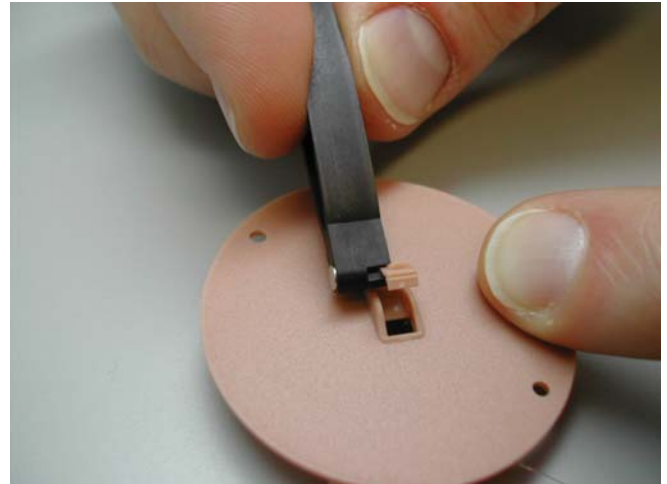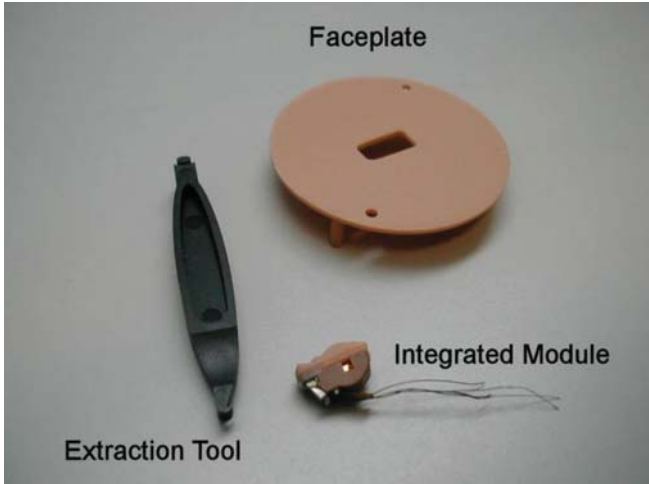

Insert extraction tool slot into side of battery door

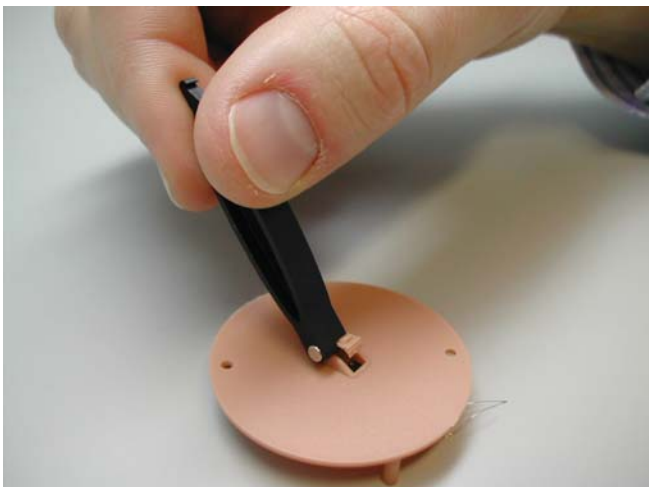


Swing extraction tool towards the "battery door closed" position

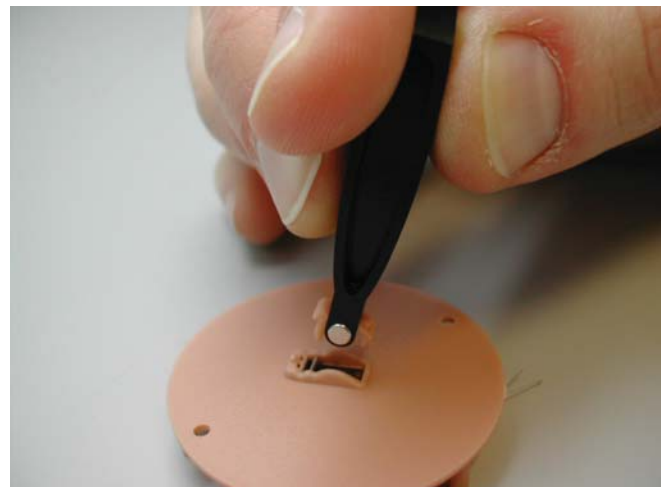


Continue swinging tool towards closed position until battery door detaches from hinge pin. Set battery door aside.

Disassembly Cont'd.

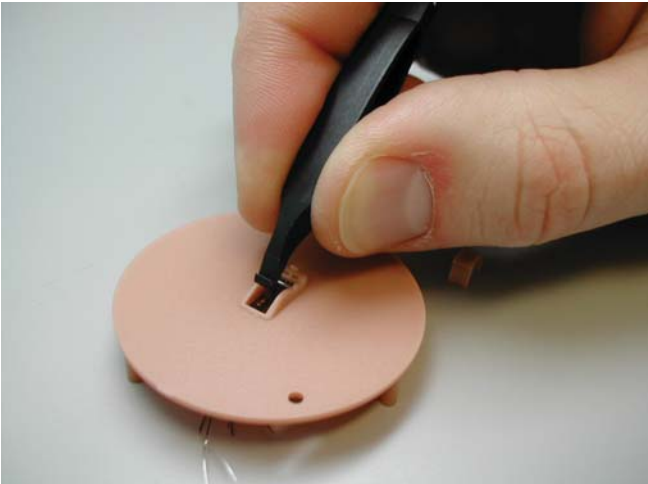

Using hook end of extraction tool, insert hook inside module, opposite pushbutton. Hook inserted at correct angle will slide into hole easily.

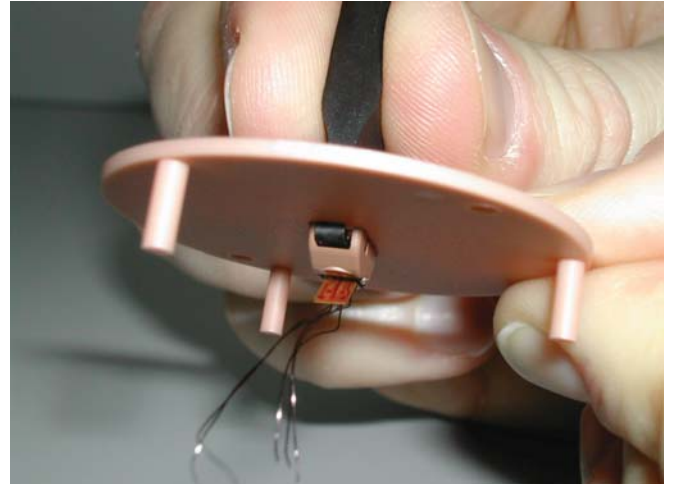

Insert hook as shown here



Simultaneously rotate tool away from pushbutton while gently applying force upward



Module detaches from faceplate as shown.

