


New Balanced Armature Multi-Way Drivers for Premium Sound

Knowles' Balanced Armature (BA) drivers are precision crafted and tuned to provide clear and consistent, premium audio for In-Ear-Monitors and TWS devices.

Knowles has developed a portfolio of multi-way driver designs boasting the latest state-of-the-art BA technologies, to provide listeners with a warm, detailed, and precise audio experience.

Multi-way drivers are available as a package with integrated crossover circuits, enabling plug-and-play to an existing earphone design. The standard models are designed to meet the Knowles Curve for a transparent tuning; however, all multi-way designs offer a variety of options available for designers looking to achieve various sound signatures.

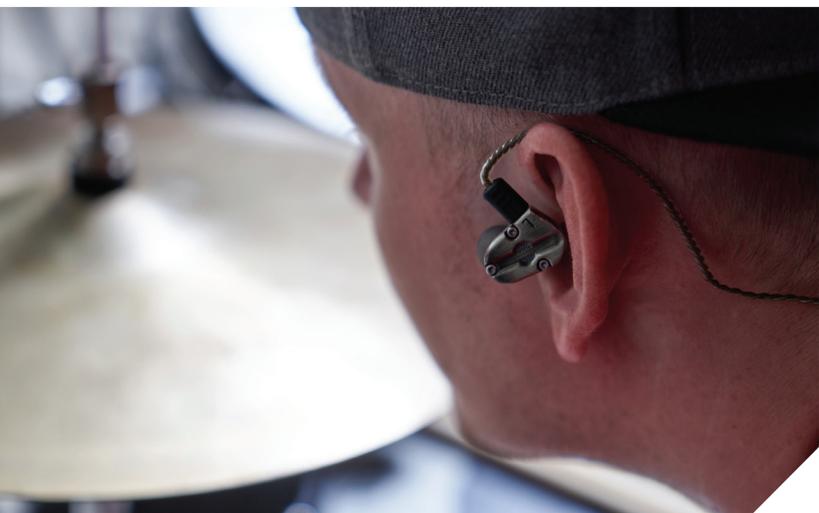

Enjoy Vivid Audio Experiences with Superior Sound Staging and Precise Playback

We offer a wide portfolio of products to enhance the listening experience:

- **full-range drivers:** small enough to replicate the performance of premium loudspeakers by allowing separate woofers, mid-range drivers and tweeters to be combined in a single package
- **dual-diaphragm woofers:** a low-end response rivaling that of dual receivers while utilizing only a fraction of the space, by doubling the output with two diaphragms driven by a single motor
- **automated receivers:** precise tolerances and uninterrupted supply continuity alongside tightened performance tolerances and improved supply chain traceability
- **tweeters:** deliver high-res audio with superior performance
- **supertweeters:** unparalleled treble extension through 40kHz, making it a complete offering to deliver lossless and high-resolution audio by establishing stability in the detail and air range

T202



T303



T404



T408

