

High-Q Ceramic Core Inductor Series (CL Series – 1008 Case Size)

High-Q Ceramic Core Inductor Range

These inductors deliver high energy efficiency and consistent inductance across a broad frequency range, making them ideal for designs in the medical and defence markets. Knowles can design inductors where Q meets or exceeds industry leader inductors. These designs are also non-magnetic and comply with MRI industry non-magnetic requirements.


Applications Include:

- RF Transceivers
- MRI Applications
- Military Radio Systems
- Antenna
- Radar Systems
- RF Testing and Measurements



Electrical Details

	CL
Inductance Range	12nH – 10 μ H
Core Material	Ceramic
Environmental	RoHS Compliant, Halogen Free
Moisture Sensitivity Level (MSL)	1
Operating temperature range	-55°C / +125°C
Packaging	7" Tape & Reel, 2000 pcs 13" Tape & Reel, 7000 pcs


Typical Q vs Frequency

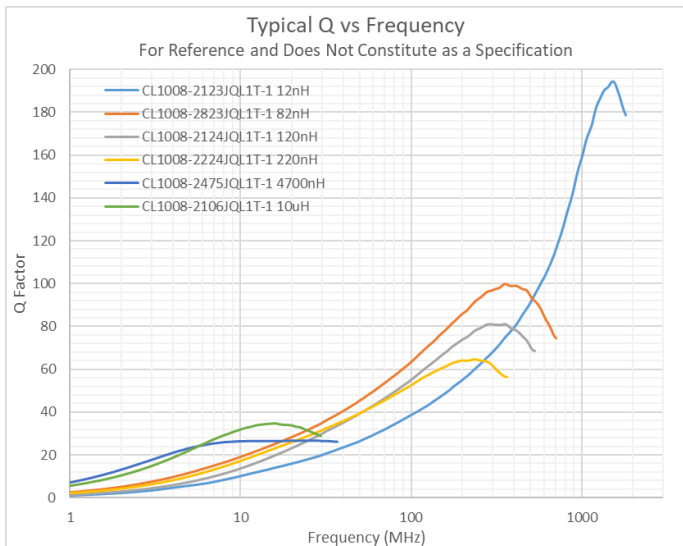

Typical L vs Frequency

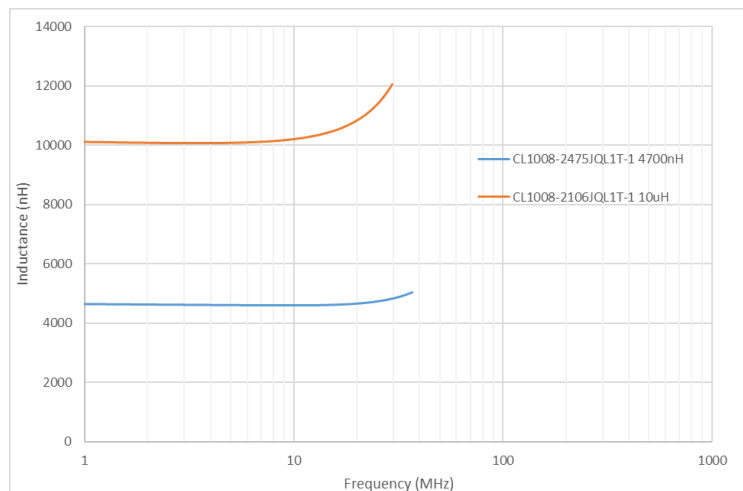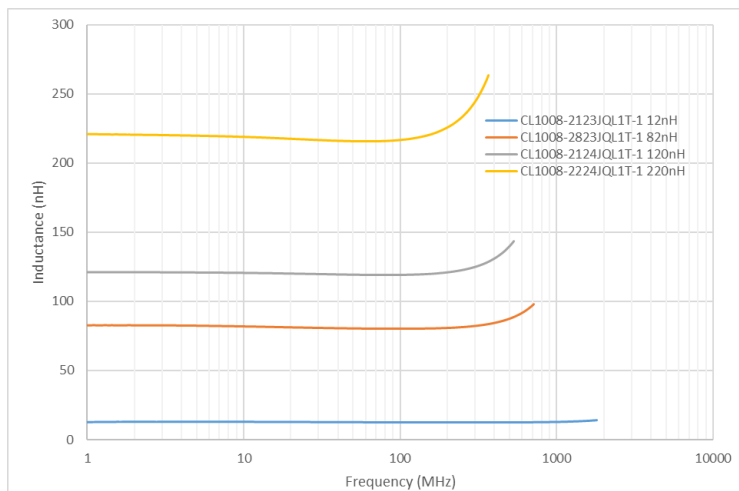

Dimensions

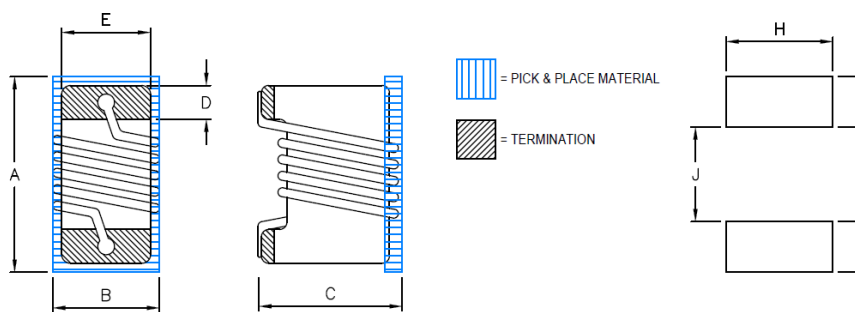

A max	B max	C max	D ref	E	H	I	J
2.80	2.60	2.30	0.51	2.03	2.54	1.02	1.27 mm
0.110	0.102	0.091	0.020	0.080	0.100	0.040	0.050 inch

Specifications

Part Number	Inductance (nH)	Inductance Tolerance	Q min	SRF (MHz)	DC Resistance (Ohm) Max	Current rating 85°C (mA)	Current rating 125°C (mA)
CL1008-2123JQL1T-1	12 @ 50 MHz	5%	50 @ 500 MHz	3300	0.09	1000	1000
CL1008-2153JQL1T-1	15 @ 50 MHz	5%	50 @ 500 MHz	2500	0.10	1000	500
CL1008-2223JQL1T-1	22 @ 50 MHz	5%	55 @ 350 MHz	2400	0.12	1000	500
CL1008-2273JQL1T-1	27 @ 50 MHz	5%	55 @ 350 MHz	1600	0.13	1000	500
CL1008-2333JQL1T-1	33 @ 50 MHz	5%	60 @ 350 MHz	1600	0.14	1000	500
CL1008-2393JQL1T-1	39 @ 50 MHz	5%	60 @ 350 MHz	1500	0.15	1000	500
CL1008-2473JQL1T-1	47 @ 50 MHz	5%	65 @ 350 MHz	1400	0.16	1000	500
CL1008-2563JQL1T-1	56 @ 50 MHz	5%	65 @ 350 MHz	1300	0.18	1000	500
CL1008-2683JQL1T-1	68 @ 50 MHz	5%	65 @ 350 MHz	1150	0.20	1000	500
CL1008-2823JQL1T-1	82 @ 50 MHz	5%	60 @ 350 MHz	1200	0.22	1000	500
CL1008-2104JQL1T-1	100 @ 50 MHz	5%	60 @ 350 MHz	1000	0.18	650	330
CL1008-2124JQL1T-1	120 @ 50 MHz	5%	60 @ 350 MHz	900	0.63	650	330
CL1008-2154JQL1T-1	150 @ 25 MHz	5%	45 @ 100 MHz	850	0.70	580	290
CL1008-2184JQL1T-1	180 @ 25 MHz	5%	45 @ 100 MHz	750	0.77	520	260
CL1008-2224JQL1T-1	220 @ 50 MHz	5%	45 @ 100 MHz	650	0.84	500	250
CL1008-2274JQL1T-1	270 @ 25 MHz	5%	45 @ 100 MHz	600	0.91	500	250
CL1008-2334JQL1T-1	330 @ 25 MHz	5%	45 @ 100 MHz	570	1.05	470	240
CL1008-2394JQL1T-1	390 @ 25 MHz	5%	45 @ 100 MHz	500	1.12	470	240
CL1008-2474JQL1T-1	470 @ 50 MHz	5%	45 @ 100 MHz	450	1.17	470	240
CL1008-2564JQL1T-1	560 @ 25 MHz	5%	45 @ 100 MHz	415	1.33	400	200
CL1008-2624JQL1T-1	620 @ 25 MHz	5%	45 @ 100 MHz	375	1.40	400	200
CL1008-2684JQL1T-1	680 @ 25 MHz	5%	45 @ 100 MHz	375	1.47	400	200
CL1008-2824JQL1T-1	820 @ 25 MHz	5%	45 @ 100 MHz	350	1.61	330	170
CL1008-2105JQL1T-1	1000 @ 25 MHz	5%	35 @ 50 MHz	290	1.75	290	150
CL1008-2125JQL1T-1	1200 @ 7.9 MHz	5%	35 @ 50 MHz	240	2.00	280	140
CL1008-2155JQL1T-1	1500 @ 7.9 MHz	5%	28 @ 50 MHz	200	2.30	270	140
CL1008-2185JQL1T-1	1800 @ 7.9 MHz	5%	28 @ 50 MHz	160	2.60	250	130
CL1008-2225JQL1T-1	2200 @ 7.9 MHz	5%	28 @ 50 MHz	160	2.80	230	120
CL1008-2275JQL1T-1	2700 @ 7.9 MHz	5%	22 @ 25 MHz	130	3.20	210	110
CL1008-2335JQL1T-1	3300 @ 7.9 MHz	5%	22 @ 25 MHz	100	3.40	200	100
CL1008-2395JQL1T-1	3900 @ 7.9 MHz	5%	20 @ 25 MHz	90	3.60	180	90
CL1008-2475JQL1T-1	4700 @ 7.9 MHz	5%	20 @ 25 MHz	80	4.00	180	90
CL1008-2565JQL1T-1	5600 @ 7.9 MHz	5%	20 @ 7.9 MHz	70	5.50	170	90

CL1008-2685JQL1T-1	6800 @ 7.9 MHz	5%	20 @ 7.9 MHz	40	7.70	160	80
CL1008-2825JQL1T-1	8200 @ 2.5 MHz	5%	20 @ 7.9 MHz	25	9.20	150	80
CL1008-2106JQL1T-1	10000 @ 2.5 MHz	5%	20 @ 7.9 MHz	20	12.00	140	70

Ordering Information – CL Inductance Series

CL1008	- 2	103	J	Q	L	1	T	- 1
Chip Size	Termination	Inductance	Inductance Tolerance	High-Q Type	Inductance Code	Version	Packaging	Suffix
1008	2 = Sintered silver base with copper barrier (100% matte tin plating). RoHS compliant.	First digit is 0. First and second digits are significant figures of capacitance code. The third digit is the number of zeros following. e.g., 103 = 10nH Values are E24 series	G : $\pm 2\%$ J : $\pm 5\%$		L = Inductance		T = Tape and Reel, 7" R = Tape & Reel, 13"	1 = Standard

List of Measurement Tools

1. Inductance measured using a Keysight E4991B with an 16197A Bottom electrode SMD Test Fixture
2. Q measured using a Keysight E4991B with an 16197A Bottom electrode SMD Test Fixture
3. SRF measured using a Keysight E4991B with an 16197A Bottom electrode SMD Test Fixture
4. DCR measured using HP4285A with pin testing jig
5. Electrical specifications at 25 °C


Soldering Information:

Reflow Soldering Conditions:

Pre-heating should be in such a way that the temperature difference between solder and ceramic surface is limited to 150°C max. Also cooling into solvent after soldering should be in such a way that the temperature difference is limited to 100°C max. Insufficient pre-heating may cause cracks on the ceramic, resulting in the deterioration of product quality. Products should be soldered within the following allowable range indicated by the slanted line. The excessive soldering conditions may cause the corrosion of the electrode, when soldering is repeated, allowable time is the accumulated time.

Reflow solder in accordance with IPC-A-610. Recommended reflow profile as laid down in IPC/JEDEC J-STD-020.

Application notes with mounting and handling guidance are available on request.

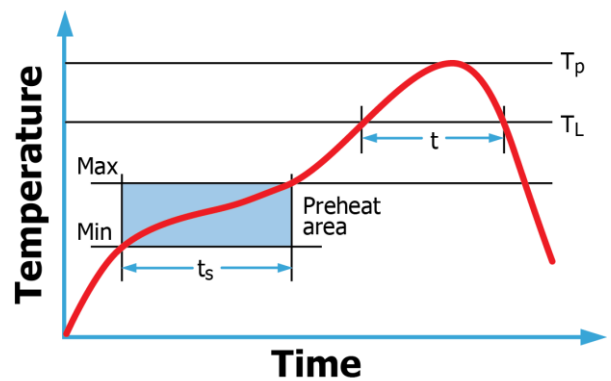

Reworking with soldering iron:


Reworking should be limited to only one time.

Note: Do not directly touch the products with the tip of the soldering iron in order to prevent the crack on the material due to thermal shock.

Preheating	150°C, 1 minute
Tip Temperature	280°C max
Soldering Time	3 seconds max.
Soldering Iron Output	30w max.
End of Soldering Iron	f3mm max.

Solder Volume:


Solder shall be used not to be exceeding the upper limits as shown below.

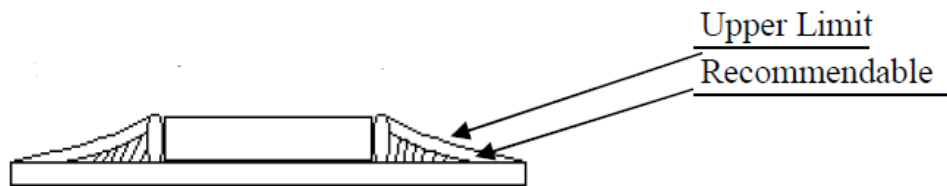

When the amount of solder volume increases, mechanical stress increases as well. Exceeding the amount of solder volume may lead to failure of mechanical or electronic characteristics.

Packaging Information


Tape and reel packing of surface mounting chip capacitors for automatic placement are in accordance with IEC60286-3.

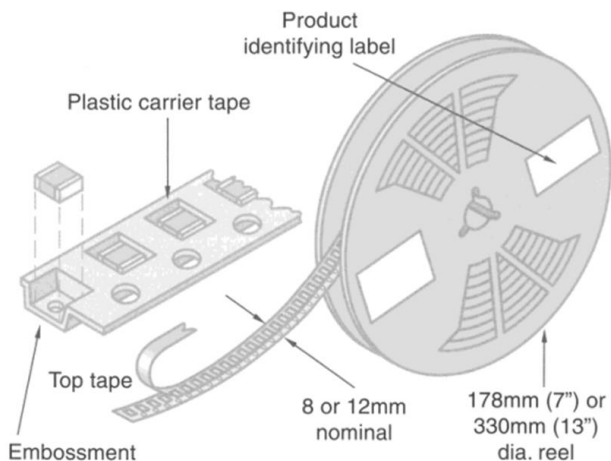

Peel Force

The peel force of the top sealing tape is between 0.2 and 1.0 Newton at 180°. The breaking force of the carrier and sealing tape in the direction of unreeling is greater than 10 Newton.


Tape Dimensions

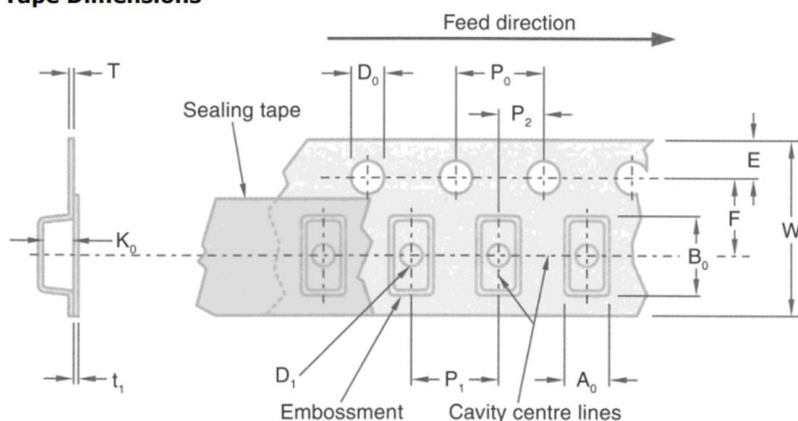

The tape width used is case size dependent and at Knowles discretion.

Symbol	Description
A ₀ B ₀ K ₀	Width of cavity Length of cavity Depth of cavity
W	Width of tape
F	Distance between drive hole centres and cavity centres
E	Distance between drive hole centres and tape edge
P ₁	Distance between cavity centres
P ₂	Axial distance between drive hole centres and cavity centres
P ₀	Axial distance between drive hole centres
D ₀	Drive hole diameter
D ₁	Diameter of cavity piercing
T	Carrier tape thickness
t ₁	Top tape thickness

Reel Dimensions

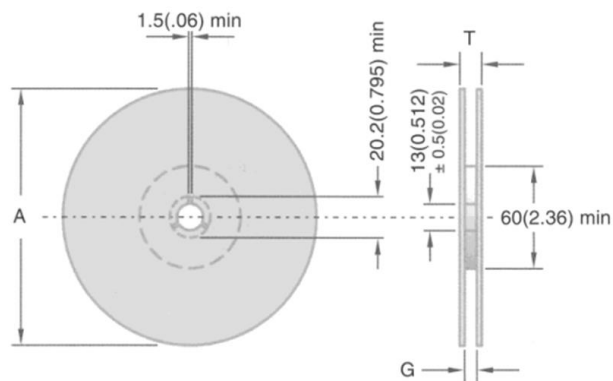

Symbol	Description	178mm Reel	330mm Reel
A	Reel diameter	178 (7)	330 (13)
G	Reel inside width	8.4 (0.33)	12.4 (0.49)
T	Reel outside width	14.4 (0.56) max	18.4 (0.72) max

Dimensions mm (inches)	
8mm Tape	12mm Tape
Dependent on chip size to minimize rotation	
8.0 (0.315)	12.0 (0.472)
3.5 (0.138)	5.5 (0.213)
1.75 (0.069)	
4.0 (0.156)	8.0 (0.315)
2.0 (0.079)	
4.0 (0.156)	
1.5 (0.059)	
1.0 (0.039)	1.5 (0.059)
0.22 (0.009) ± 0.05 (0.002)	0.4 (0.016) ± 0.1 (0.04)
0.1 (0.004) max	

Mechanical Characteristics:

ITEM	Test Condition	Specification
Inductance	Part measured at Frequency (See Product Table)	Meets Requirements
Quality Factor		

Electrical Characteristics:

ITEM	Test Condition	Specification
Push Test	PCB mounted component. Force applied for 60s	1008 series - $\geq 1.0\text{Kg}$
Temperature Cycling Test	10 cycles consisting of: -55°C for 30mins, 25°C for 15mins and 125°C for 30 mins.	Change In Inductance: No more than 5%
High Temperature Storage	125°C for 1000hr Unpowered	
Humidity Bias	85°C/85%RH $\pm 2^\circ\text{C}$ for 1000hr Unpowered	
High Temperature Operating Life at 85°C	85°C for 1000hr Powered at rated current	
High Temperature Operating Life at 125°C	125°C for 1000hr Powered as per Specification table	
Resistance to Solvents	MIL-STD-202 Method 215	No Damage
Mechanical Shock & Vibration	Vibrations of 5 gs for 20 minutes, 12 cycles for 3 orientations	Change In Inductance: No more than 5%
Substrate Bend Test	3-point bend of substrate to 2mm deflection (AEC-Q200-005)	No Damage
ESD	Classification 6 $\geq 25,000\text{ V}$ (Air Discharge)	Change In Inductance: No more than 5%

Knowles Precision Devices Sales contact e-mail	Europe:	KPD-Europe-sales@knowles.com
	Asia:	KPD-Asia-sales@knowles.com
	USA:	KPD-NA-sales@knowles.com